


CARD CABINET LOCK

USER MANUAL

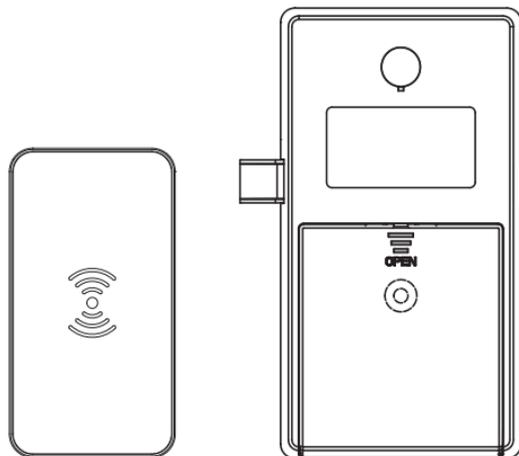

Feature

1. Modes: Single and double opening mode
2. Aluminium alloy panel with elegant design
3. surface mounted, widely used in drawer, cabinet, wardrobe etc.

Instructions for use

1. Set the mode and initialize

1)How to set the automatic lock mode (unlock with user card, and lock automatically 4 seconds after unlocking)

Press and hold the initialization button on the lock body for 2 seconds , release it after hearing a " beep " sound, and the lock enters the automatic lock mode, and the initialization is completed .

2)How to set the public mode (When you swipe the card to lock, if the card is not registered, the lock will register it as a temporary user card. After the temporary user card is used to unlock the lock, the temporary user card will be automatically cleared. You can also use the user card to turn the lock on and off)

Press and hold the initialization button on the lock body for 2 seconds, continue to press and hold it for 2 seconds after you hear a 'beep' sound, and release your hand after you hear 'Do-re-mi' to enter the public mode, and the initialization is completed.

3)How to set manual lock mode (user card is required for both locking and unlocking)

Press and hold the initialization button for 2 seconds . Continue to hold it when you hear a " beep ". Continue to hold it when you hear "Do-re-mi" 2 seconds later. Release your hand when you hear "mi-re-do" 2 seconds later to enter manual locking mode, and the initialization is completed.

Note: After the mode is switched, all management card and user card will be cleared.

2.How to set up the management card (1 card)

1)Management card functions: can be used to enter and delete user cards, emergency unlocking and mode change.

2)How to set the management card: In the initialization state , swipe the first card and hear a " beep " sound , and the management card entry is complete. If multiple management cards are required, you can copy the card. The management card can only be deleted through the initialization operation.

3.How to set up user cards (1-15 cards)

1)Function of user card: can be used to lock and unlock.

2)How to set the user card: After swiping the management card, there will be a "beep" sound , the lock tongue will retract, the red light will flash, and the card will be swiped to enter. After a long " beep " sound , the entry is completed , and the red light will continue to flash. You can continue to swipe the card to enter. If the entry is complete, wait for 6 seconds to automatically exit . (If the card has been entered, swipe it again and it will sound "beep beep" , and the card will be deleted.)

4.Set up a temporary user card (1 card)

Temporary user cards are only available in public mode.

In public mode, when closing the lock, swipe a card that has not been registered, the green light flashes once, a " beep " sound is heard , the lock is closed, and the card is registered as a temporary user card . When unlocking the lock, swipe a temporary user card , the green light flashes once, a " beep " sound is heard , the lock is opened, and the temporary user card will be automatically cleared.

5.User card lock and unlock

1)Automatic lock mode : Swipe the user card, " beep " , the lock opens , and after 4 seconds, the lock automatically locks. If the card is not entered, swipe the card and hear two " beep " sounds, indicating that the lock fails to open.

2)Public mode and manual locking mode : Swipe the user card, the green light flashes once, there is a " beep " sound , and the lock is closed; swipe the user card, the green light flashes once, there is a " beep " sound , and the lock is opened.

6.Changing the door opening mode

Swipe the management card and hearing a "beep" , the green light turns on. Stay in the card swiping area for 4 seconds, and a " beep " sounds . If the automatic locking mode is set, immediately remove the management card, the green light goes out, and the mode is changed to automatic locking mode. After continuing to stay in the card swiping area for 2 seconds, the "Do-re-mi" music sounds,if the public mode is set, immediately remove the management card, the green light goes out, and the mode is changed to public mode. After continuing to stay in the card swiping area for another 2 seconds, the " "mi-re-do " music sounds, the green light goes out, and the mode is changed to manual locking mode.

7.Occupancy reminder (only available in public mode)


When the door is locked, the red light flashes every 3 seconds to indicate that the cabinet has been used.

8.Low battery alarm

After unlocking, beep 8 times continuously, indicating that the battery voltage is too low. Please replace the battery in time .


Installation Instructions

1. Put the installation drawing on the door, approx 48mm between the door frame and center hole (Picture 1), then drill the hole

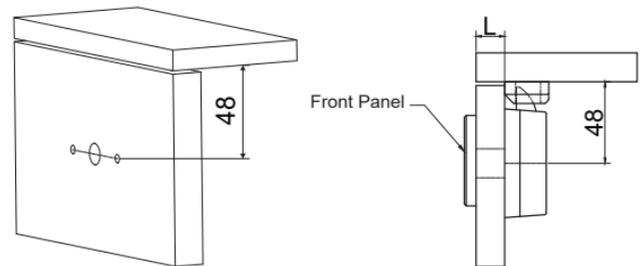

Picture 1

wire connection

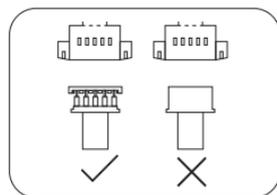

2. Install the front panel and back lock

2.1) All-in-One installation


Wire goes through the center hole and connect back lock, (Tide up the wire not crush), fix the panel and back lock by screw M4X20

2.2) Separation installation

Wire goes through the center hole and fix the front panel by screw M4X16 and washer, then connect the back lock, (Tide up the wire not crush), fix back lock by screw ST3.5X18

3. Fix the striking plate by screw ST3.5X18(Make sure latch works well)

All-in-one installation—Chart ①

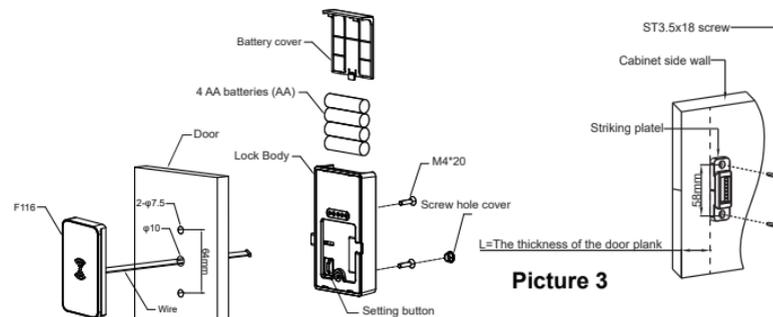


Picture 2

Picture 3

①	Door Thickness(mm)	Cross countersunk Screw
1	14mm~16mm	M4X16
2	18mm~20mm	M4X20

Separate installation②

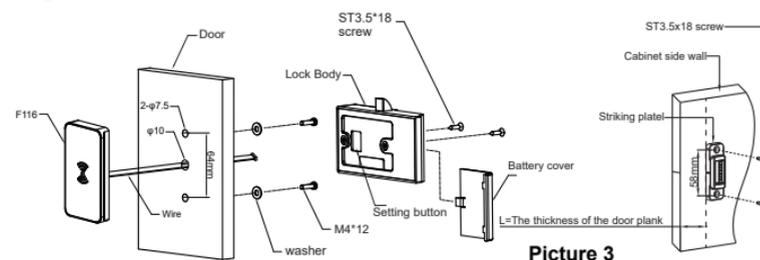


Picture 2


Picture 3

②	Door Thickness(mm)	Phillips pan head Screw
1	14mm~16mm	M4X12
2	18mm~20mm	M4X16

COMPONENT

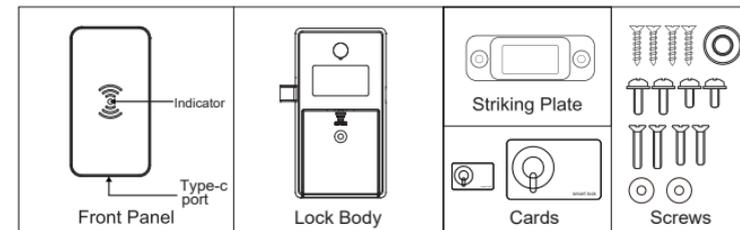

INSTALLATION DRAWING

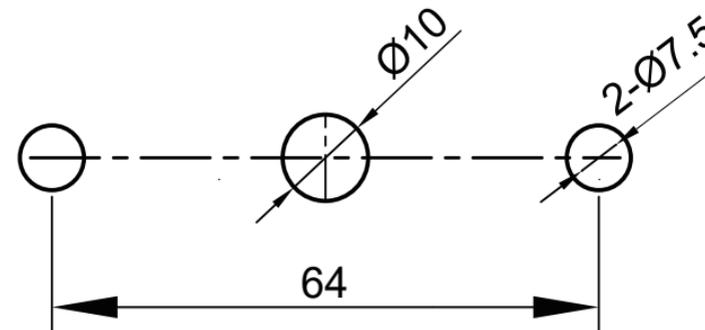

Follow the drawing to drill the hole