
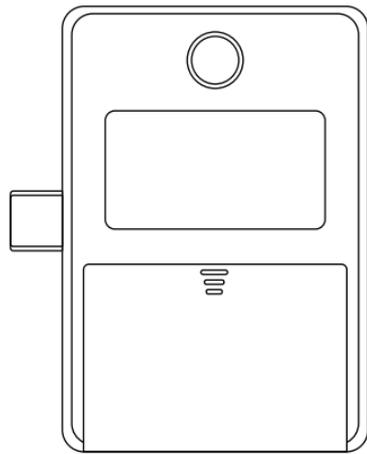


# CABINET LOCK USER MANUAL

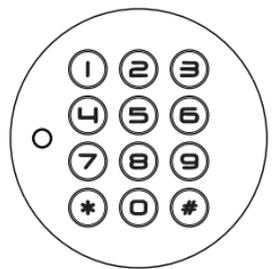

## Feature

- Two passwords, master password and user password
- Working mode : Automatic Mode, Public Mode, Manual Mode
- E-key for management in the business application
- Visual signal with indicator
- Energy-saving technology, lifetime of new battery up to 6000 times opening
- Low battery warning, outer power supply by TYPE-C port

## Individual mode

### 1. How to set individual mode

- Insert E-Key
- Enter 44#1#, automatic mode enabled
- Enter 44#2#, manual mode enabled



### 2. How to change user password (Factory Setting: 1-2-3-4)

- Press \* for 2 seconds, Red light
- Enter current user password code and #
- Enter 1 and #
- Enter new user password and #
- Enter new user password and # again, "Beep, Beep", new user password enabled



### 3. How to change master password (Factory Setting: 5-4-3-2-1-5)

- Press \* for 2 seconds, Red light
- Enter current master password and #
- Enter 2 and #
- Enter new master password and #
- Enter new master password and # again, "Beep, Beep", new master password enabled



## 4. How to lock

- Individual Automatic Mode  
→Push the door closed, door locks automatically
- Individual Manual Mode  
→Push the door closed  
→Enter #, latch comes out, locked


## 5. How to unlock

- User password or master password  
→Enter user password and #, "beep,beep", unlocked  
→Pull door open



## How to initialize the lock

- Insert E-Key
- Enter 11#, "beep,beep",system initialized
- Note: System initialized, user password: 1-2-3-4, master password: 5-4-3-2-1-5

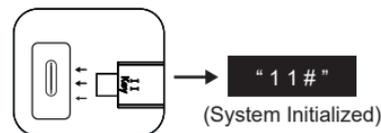


## How to enable new ekey

- Insert New E-Key
- Press \* for 2 seconds, Red light
- Enter current master code and #
- Enter 5 and #
- "Beep, Beep, Beep, Beep", System initialized, New Ekey enabled

## Public mode

### 1. How to set public mode

- Insert E-Key
- Enter 44#3#, public mode

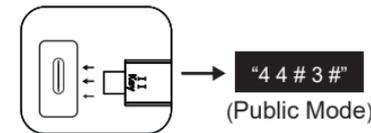

### 2. How to lock

- Push the door closed
- Enter any password and #, "beep,beep"
- Latch comes out, locked



### 3. How to unlock

- Enter the password and #, "beep,beep", unlocked
- Pull door open




## Note:

- One-time password
- When unlock, the latch retracts, next guest will use his/her password to lock the door

## Other Function

### E-Key

- 1.Insert E-Key
- 2.Pull the door open

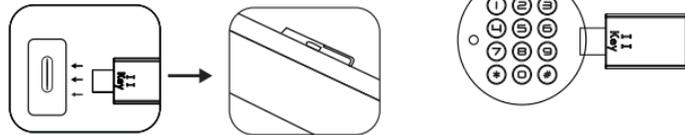


### 2. Low Battery Warning

- 1.If "Beep Beep ..." 6 sounds after door opened,red light flashes six it indicates low battery then change new battery in time
2. Note: Use 3XAAA alkaline battery, not take Carbon battery


### 3. Emergency power

- Can be connected to a power bank or mobile plug for external power supply when the power is low. Replace the battery after unlocking.
- Password error and low battery occur at the same time, insert the E-key and external emergency.

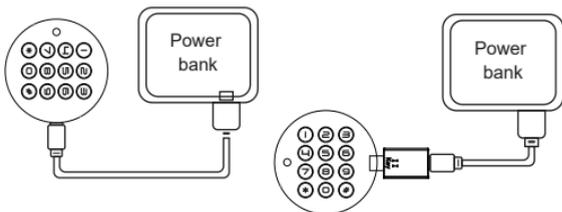


## Installation Instructions

1. Put the installation drawing on the door, approx. 45mm between the door frame and center hole (Picture 1), then drill the hole

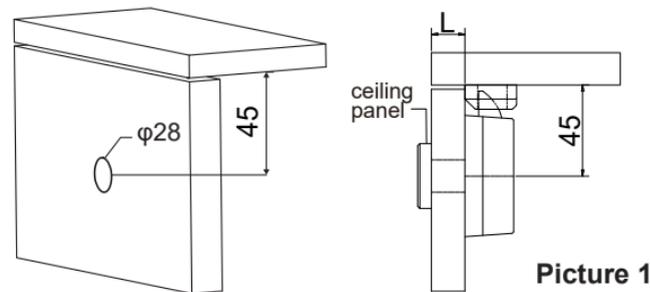


Picture 1

### wire connection

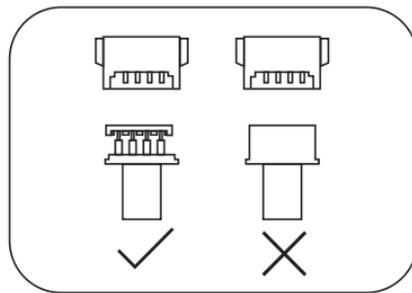


2. Wire goes through the center hole and fix the front panel by screw M4X12 and washer, then connect the back lock, (Tide up the wire not crush), fix back lock by screw ST3.5X18

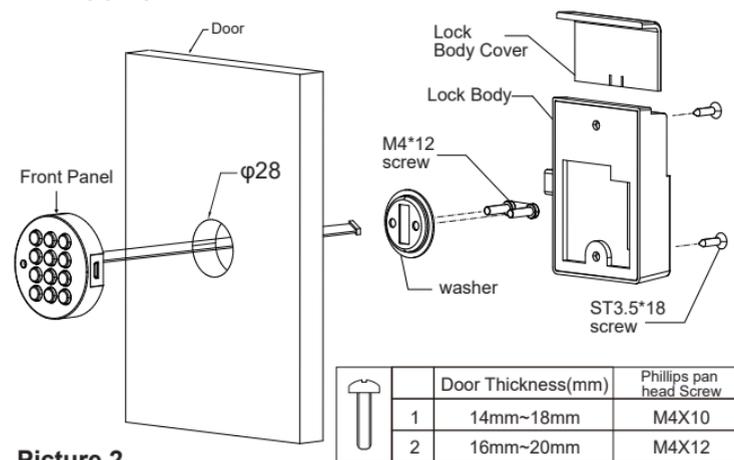


Picture 2

3. Fix the striking plate by screw ST3.5X18 (Make sure latch works well)

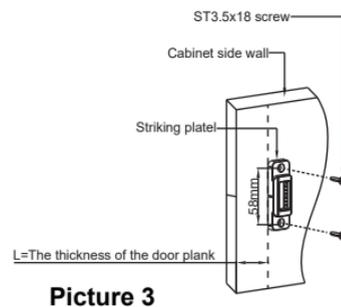


Picture 3

## COMPONENT

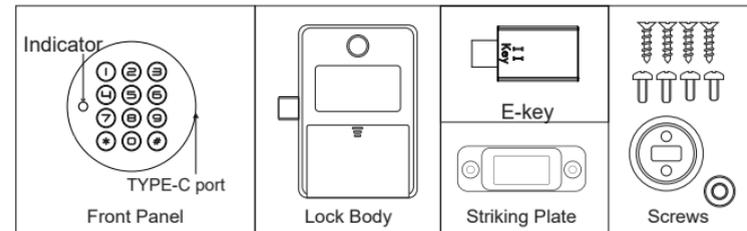

## INSTALLATION DRAWING

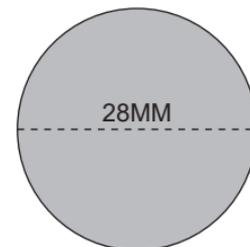

Follow the drawing to drill the hole