


FINGERRPINT CABINET LOCK USER MANUAL

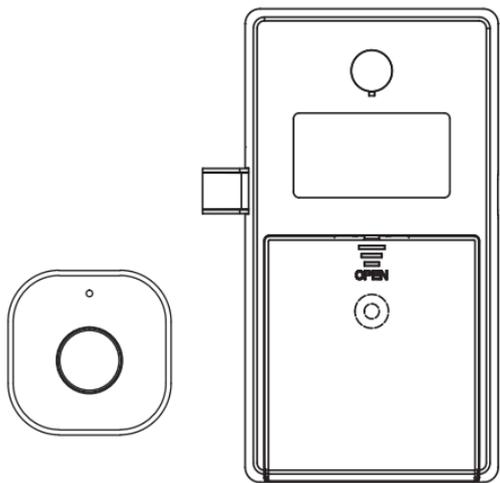

Feature

- Biometric sensors with high sensitivity.
- Fingerprint capacity: 10.
- APP for emergency unlocking and management.
- Usage Scenarios: drawer, cabinet, wardrobe etc.

V000240814

NOTE:

This electronic lock registration fingerprint must be through the "TTLOCK APP", before use, please download the "TTLOCK APP", and register an account.

Fingerprint to unlock

- (1) In the factory state, any fingerprint can be unlocked.
- (2) In the registered fingerprint state, Place your (registered) finger on the sensor can be unlocked, and automatic lock after 4 seconds.
- (3) If the fingerprint is wrong, the red light is on for 2 seconds.

TTLOCK APP INSTRUCTION

1.How to bind the electronic lock

- (1) Open the mobile phone Bluetooth and location service.
- (2) Open the "TTLOCK APP" and enter the add lock page, as shown in Figure (1)
- (3) Click the "+" icon in Figure (1), enter the page of Figure (2), touch the fingerprint sensor with any finger, On the Figure (3) page, click "+" to add the lock.



- (4) Change the name of the lock as Figure (4), click "OK", and enter the main menu as (Figure 5) after successful binding.




2.How to add new fingerprints

Click "Fingerprints" on the main menu page to enter the registration fingerprint, and register the fingerprint operation according to the prompts.



3.APP to unlock

Click the lock logo as Figure (8) to unlock, and lock automatically after 4 seconds.

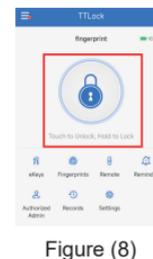


4.Lock-opening record query

Click "Records" under the main menu to query the unlocking record.



5.Delete fingerprints

Click "Fingerprints" on the main menu page, enter the registration fingerprint menu, click the fingerprint to be deleted, and click "Delete".

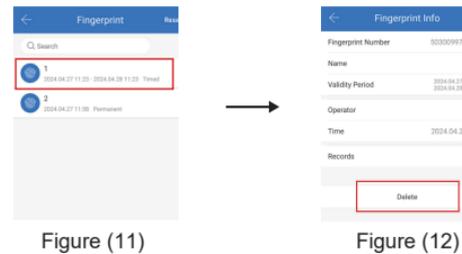

6. Unbind the equipment / restore the factory settings

Click "Settings" under the main menu, enter the interface of Figure (14), click "Delete", and unbind according to the prompts. After the unbinding device is successful, the factory setting is restored, and all fingerprints are deleted.

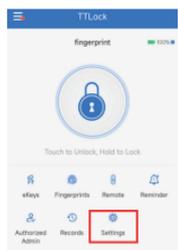


Figure (13)


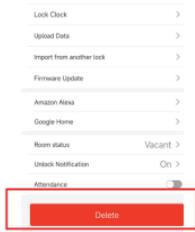


Figure (14)

Low power supply reminder and external power supply

(1) Insufficient power: If red lights flash for 3 seconds when unlocking the door. Please replace the battery in time.

(2) If the power is not enough to unlock, please use the power bank or charging cable for external power supply.

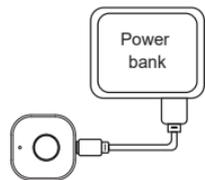


NOTE

Battery type: 4*AA alkaline batteries., prohibit the use of carbon batteries.


Installation Instructions

1. Put the installation drawing on the door, approx 48mm between the door frame and center hole (Picture 1), then drill the hole

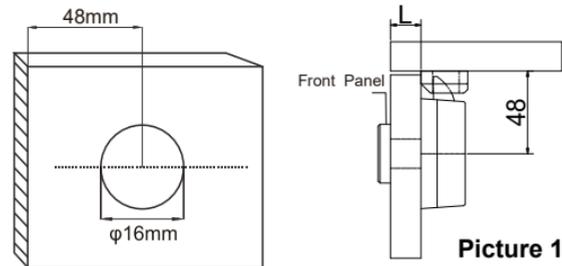


Picture 1

wire connection

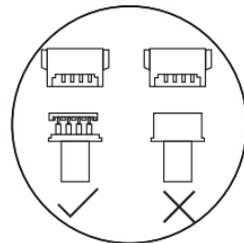


	Door Thickness (mm)	Screw
	14mm~16mm	ST2.6x10
	17mm~21mm	ST2.6x14

- 1) Insert connecting wire (See picture 2) into the front panel, then wire goes through the centre hole; Fix the panel by screw ST2.6X10 and washer
- 2) Fix the washer to the door panel with screws ST3 X10
- 3) Insert connection wire (See Picture 2) into lock body, then fix by screw ST3.5X18MM.

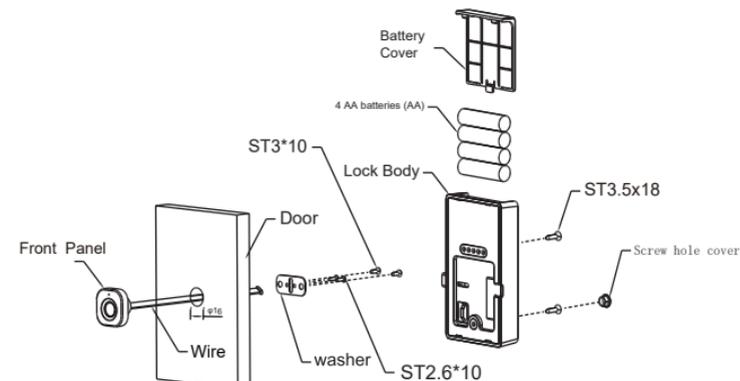


Picture 2

3. Fix the striking plate by screw ST3.5X18 (Make sure latch works well)

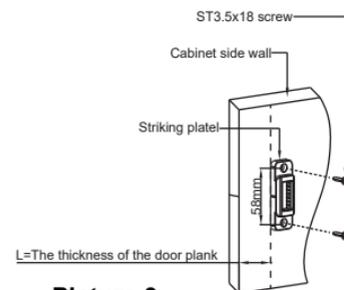


Picture 3

COMPONENT

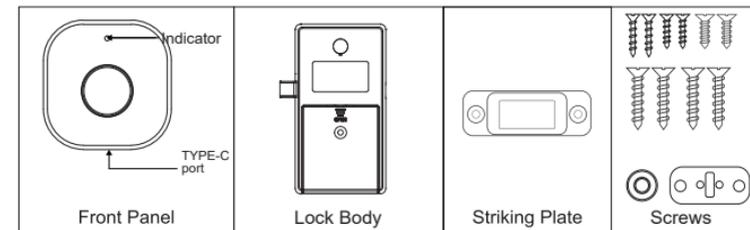

INSTALLATION DRAWING

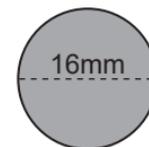

Follow the drawing to drill the hole